


Engineer Stamp



8/8/16



- Note:**
- When doing work in the City ROW (sidewalk, storm drain, drive pads) avoid dirt from getting into the street. If dirt is present in the street, the street should be swept every few days or the same day if rain is imminent.
 - If stock piling dirt in the street and rain is forecasted, place wattles along the down slope side of the pile.

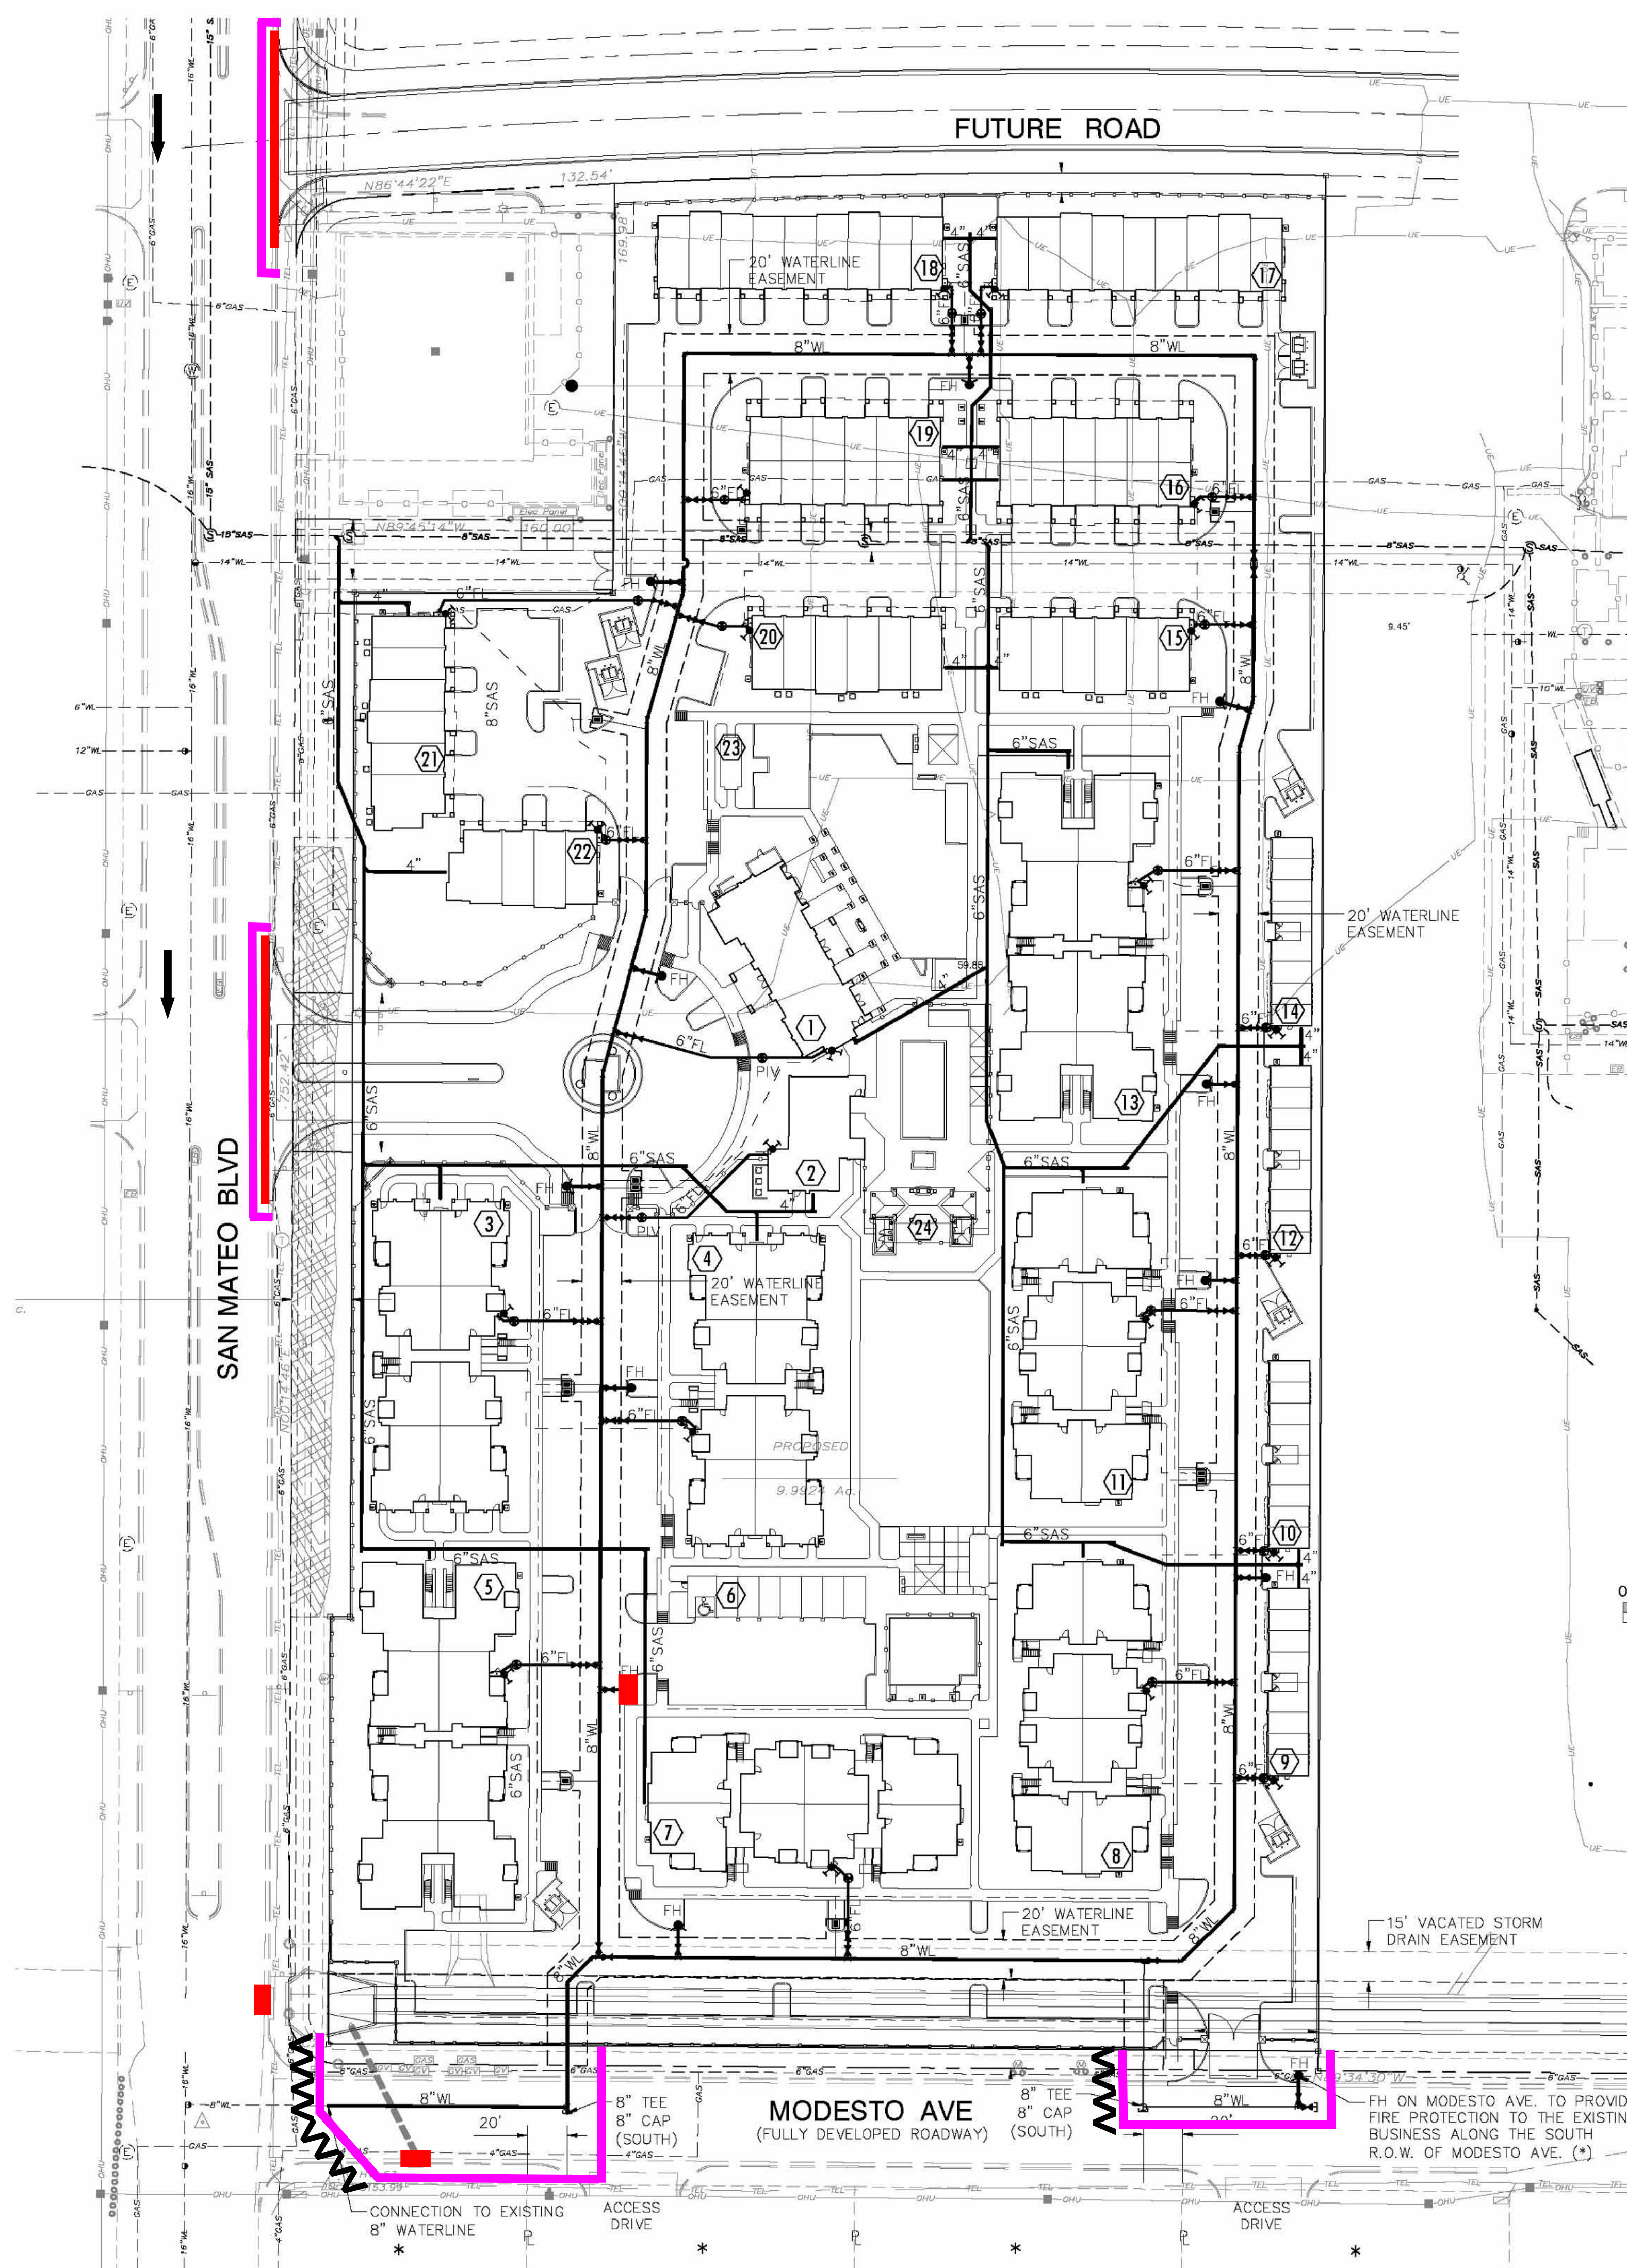

Legend

Erosion Sediment Control Plan

- Project Perimeter & Disturbed Area
- Silt Fence
- Pre Flow
- Flow
- Arroyo
- Outfall
- Posting Sign
- Earth Berm
- Staging Area
- Stabilized Construction Entrance
- Trash Receptacle
- Chemical Toilet
- Concrete Washout
- Mulch Socks
- Saw Cut
- Weighted Wattle
- Proposed Curb Inlet with protection
- Existing Grate Inlet with protection
- Retention Pond

Broadstone NorthPoint Utilities

Receiving Waters and Critical Habitat: Rio Grande

Impairments: E. coli, Dissolved Oxygen, PCBs
in Fish Tissue, Water Temperature

Grade: Before 1% - 4% After 1% - 3%