




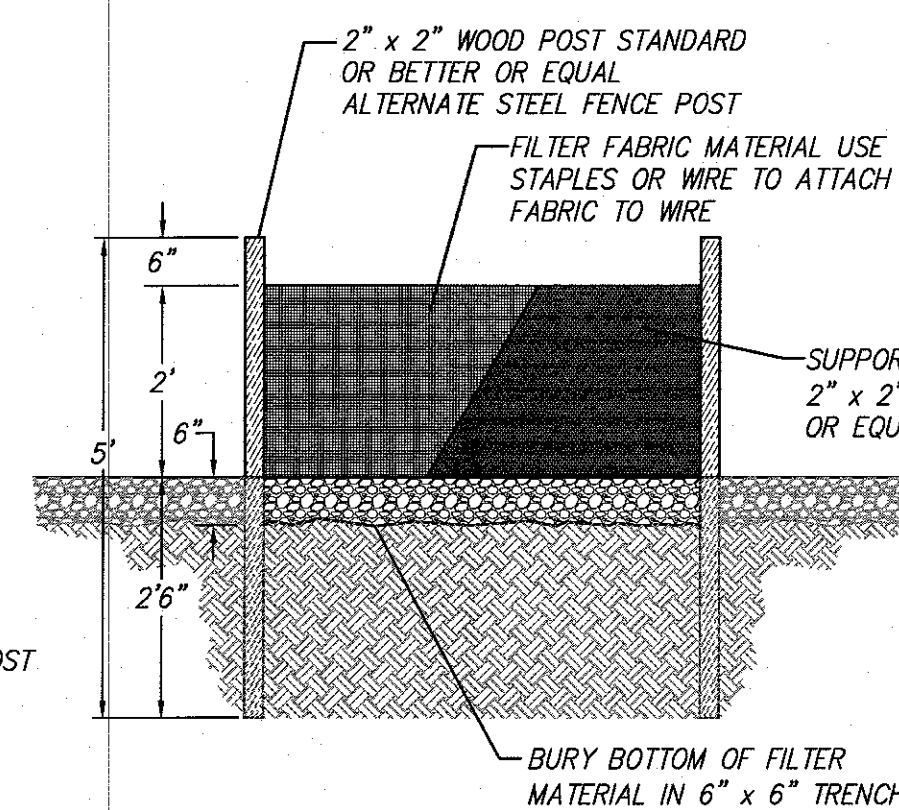

SILT FENCE FOR SEDIMENT CONTROL
N.T.S.

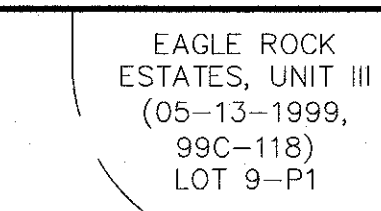

1. WHEN DOING WORK IN THE CITY ROW (SIDEWALKS, DRIVE PADS, UTILITIES) PREVENT DIRT FROM GETTING INTO THE STREET. IF DIRT IS PRESENT IN THE STREET, THE STREET SHOULD BE SWEEPED EVERY FEW HOURS OF THE SAME DAY IF RAIN IS IMMINENT. ANY TEMPORARY DIRT PILE SHALL BE PLACED ON THE UPSTREAM SIDE OF THE TRENCH.
2. ALL SOIL DISTURBED DURING UTILITY TRENCHING SHOULD BE PLACED ON THE UPSTREAM SIDE OF THE STREET CUT AND THE AREA SWEEPED AFTER THE WORK IS COMPLETED.

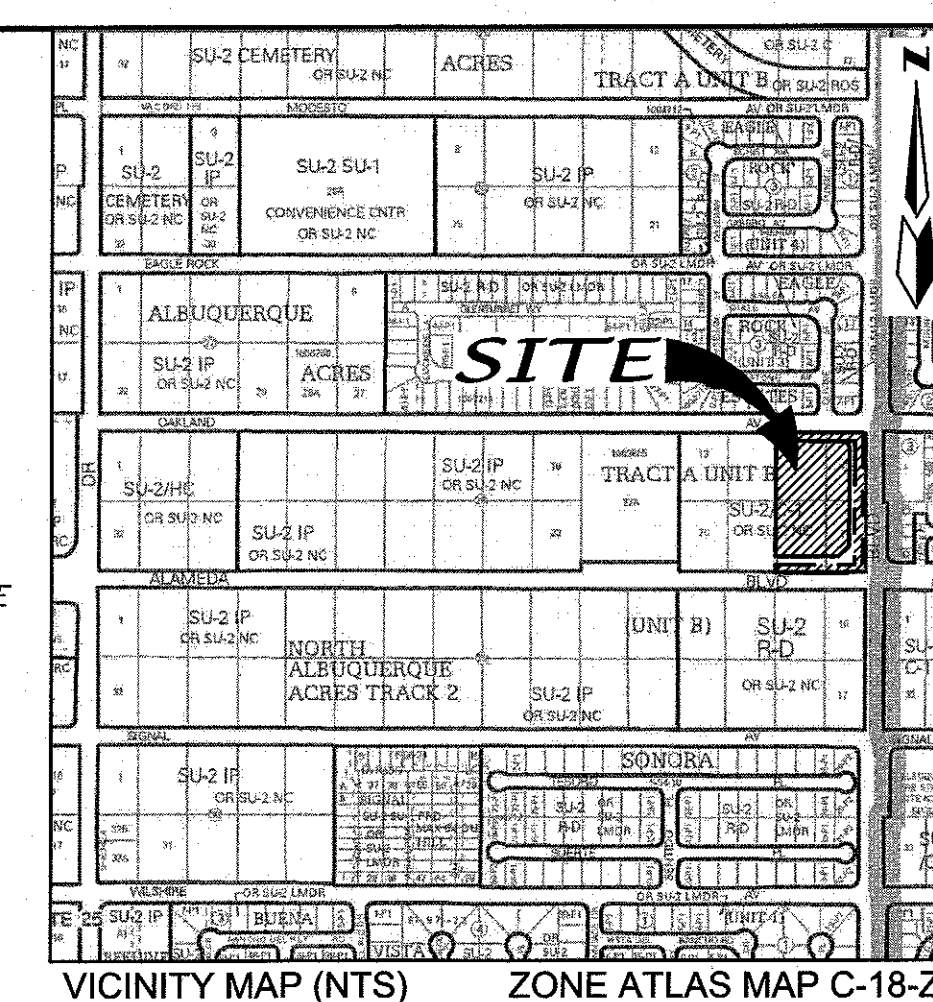

PERIMETER WALL OR SILT FENCE
(TYPICAL)

CONCRETE WASHOUT AREA

COMPACTED CONSTRUCTION
ENTRANCE

DUMPSTER AREA

WATTLES (AROUND SD INLETS TYPICAL)

[illegible]