


Earth Dike


[illegible]

Cut Back Curb

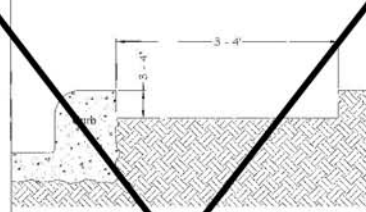

Definition
A temporary sidewalk trap formed by excavation behind the curb.
Purpose
The purpose is to intercept sediment before it enters the lot during construction and retain sediment on lot.
Conditions when the Practice Applies
A curb-cut curb is installed when discharge from the lot runs over the curb.
Design Criteria
1. Dig back 18" from behind curb 3'-4" deep to form a temporary sediment trap.
2. Install a new sidewalk, will form a two stage sediment trap that will be more effective.

Stone Check Dam

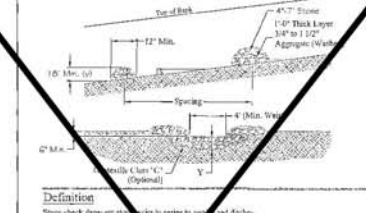[illegible]

6/19/14

- 1) All perimeter BMP measures for sediment control shall be installed before any earth disturbing activity. If it's not practical to install BMP's due to thick vegetation then the contractor shall grub a perimeter line and install BMP's immediately thereafter.
- 2) All erosion control installations shall meet the storm water management standards and manufacturers guidelines.
- 3) Sediment collected behind BMP's shall be removed when sediment reaches one half the height of the barrier.
- 4) BMP's shall be inspected and maintained per NPDES regulations e.g. at a minimum once every two weeks or weekly when discharges may reach an impaired waterway and after a rain event where it rains .25" in a 24 hr period.
- 5) BMP maintenance shall begin within 24 hours of noting the needed repairs.
- 6) Construction site entrance - The contractor shall place a stabilized construction track-out at each egress location.
- 7) Street sweeping - The contractor shall sweep the off site sediment tracking onto public right-of-ways if it is more than a stain.
- 8) Disturbed portions of the site that are inactive for more than 14 days must be temporarily stabilized with tackifiers if construction activity resumes after 21 days or reseeded if construction activity will not resume after 21 days.
- 9) All areas not covered by impervious material or landscaping shall be reseeded with native grasses.
- 10) The contractor shall institute good housekeeping by keeping loose paving, trash and construction debris in approved solid waste containers.
- 11) The contractor shall control dust generated from earth work activity.
- 12) Temporary BMP's shall be removed following permanent stabilization.
- 13) All subcontractors shall be made aware of SVPPP requirements.

Project: _____

Date: _____

Sheet No. _____